

使用说明



SiNE TAG

Find my全球定位器 (Y1)

包装清单

- Find my全球定位器 *1
- CR 2030电池 *1
- 使用说明书 *1

产品主要功能

1、“查找”网络定位

当设备与手机（或其它完成配对的苹果装置）超出蓝牙距离,查找app仍然可以透过查找的网络功能帮您追踪您的设备,查找网络可以藉由全球数以万计的苹果装置帮您定位设备的所在位置,只要该设备附近有别的苹果装置,包含iPhone,iPad,iMac 等苹果装置,您的查找app中,即可收到设备的通知以及最新的位置。

2、丢失模式

如果设备与您的手机断开超过一段时间,在查找app中链接不上设备,也可以选择丢失模式,启用后,输入您的留言,联系电话等,捡到的人可以透过查找app得知这些信息,并与您联系,另外,当您的苹果装置在该设备的蓝牙传输范围内时,也会主动收到通知,遗失的设备就在附近,可以透过播放声音来寻找该设备。

3、播放声音

手机与设备在蓝牙范围内(一般是直线距离20米左右),在查找app中,点击播放声音,设备会发出音乐,帮助您快速找到附近的物品。

快速上手

1、设备开机

电池响后,此时设备进入配对状态,可以跟App重新配对,安装到设备后,设备响声后开机。

2、绑定设备

打开苹果自带的“查找”App。
·将设备靠近您的iPhone,轻点“物品”标签,选择“添加新物品”,点击“其他支持的物品”。
·带有SiNE TAG 字样的设备,轻点“连接”。
·填写“自定义名称”以命名您的设备并选取一个表情符号。
·同意将设备注册到您的Apple ID。
·轻点“完成”绑定成功。

3、启用“丢失模式”

打开苹果自带的“查找”App,点击屏幕底部的“物品”,然后点击物品的名称。
在“丢失模式”下方,点击“启用”。
按照屏幕指示操作,点击“继续”输入联系电话或者邮箱。
·点击“下一步”核对信息后,请再次点击“启用”完成设置。

4、删除设备

打开苹果自带的“查找”App,点击屏幕底部的“物品”,然后点击物品的名称。
在列表的最下方找到“移除物品”,轻点“移除”完成操作。

说明:删除设备后,设备会发出提示音,设备不会关机,处于配对模式。如果5分钟之内,没有重新配对,设备就会离开配对状态。此时设备与App无法配对。如果需要配对设备,需要重新安装电池,设备。

其他功能介绍

1、关机

设备在电池移除后,会进入关机状态。

2、设备状态确认

将设备先背面朝上五秒,再接着正面朝上五秒。设备响,说明设备在工作。如果设备不响,说明设备处于关机状态,请确认电池电压是否足够,是否正常工作。

3、设备重新进入配对状态

删除设备后,设备会发出提示音,但不关机以便处于配对模式。如果5分钟,没有重新配对,设备就会离开配对状态,此时设备与App无法配对。如果需要再次进入配对状态,需要重新安装设备的电池,设备响后,此时设备再次进入配对状态,可以跟查找App重新配对。

按键使用说明

注意:

因外壳的拆装过程容易造成损坏,按键仅开放给专业维修人员使用,用来确定运动传感器是否工作异常。

1、设备状态确认

双击设备按键两下,设备响,说明设备在工作。如果设备不响,说明设备处于关机状态。请确认电池电量是否足以正常供电,并重新安装,确认设备在电池重新安装后,会发出蜂鸣声。

2、设备重新进入配对状态

删除设备后,设备会发出提示音、设备不会关机,处于配对模式。如果10分钟,没有重新配对,设备就会离开配对状态,此时设备与App无法配对。如果需要配对设备,需要点击设备按键一次,设备响。此时设备进入配对状态,可以跟App重新配对。

3、恢复出厂设置

在设备开机后,双击设备按键,设备响,马上按住设备按键约八秒,直到设备发出提示音,松开按钮,恢复出厂设置完成,此时设备可以进行重新配对。

注意:

如果想要将设备转给另一个使用者使用,需先在Find My App中,移除设备,设备才可以跟新的账户配对。

常见问题

1、设备什么时候可以被别的苹果手机定位?

当设备与主人的苹果手机断开一段时间后,设备可以开始被别的苹果手机定位。主人就可以开始获得设备的位置。

2、如何确认设备是否已开机?

首先,请将设备先背面朝上五秒,再正面朝上五秒,设备响,说明设备在工作。如果设备不响,说明设备处于关机状态。请重新安装电池,开机。

3、如何防止设备被用于恶意跟踪?

当别人的设备混入您的随身物品时,并跟踪超过一段时间,您会通过以下两种方式被提醒:

(1) 如果您有iPhone,iPad,iMac或者iPod touch等苹果设备,您会在苹果设备上获得提醒;此功能在iOS或iPadOS 14.5及以后版本的苹果设备上有。

 
(2) 如果您没有苹果设备,如果别人的SiNE TAG 离开了自己的主人,并跟踪了一段时间,当它移动时,它会发出音乐,以提醒您。当然,如果您的身边的朋友正带着设备,或者您搭乘的地铁上很多人都有这个设备,也不必担心。因为只要设备没离开主人身边,就不会触发这样的提醒。

4 如何保护我的隐私?

您的设备在哪里,只有您自己能看到。您的位置数据和历史记录绝不会存储在苹果的服务器中。传递您设备位置数据的设备也始终保持匿名,而且位置数据在查找的每一步都有加密保护。因此,苹果都不知道您的设备的位置,以及帮忙找到它的设备是何身份。

5、如何给设备更换电池?

(1)将电池盖逆时针方向旋转,取下电池仓的上盖;
(2)将电池取下。
(3)将新电池装到电池仓内(如下图),注意正极(字体)朝上,听到上电的蜂鸣声后,将电池盖顺时针旋转扣上。

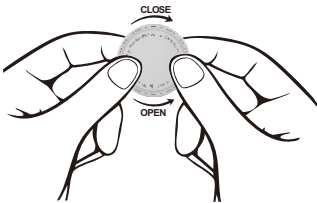

6、“查找”网络是什么? 如何工作?

Apple Find My 网络提供了一种简单、安全的方式,可以使用iPhone,iPad,iPod touch、Mac上的Find My 应用程序或Apple Watch上的Find Items 应用程序在地图上查找兼容的个人物品。只需将您的兼容产品与Apple Find My App 配对,即可与您的Apple 设备一起查看。如果您的物品丢失了,您可以将其置于丢失模式,以尽可能找到它的任何人显示消息和联系信息。Find My 网络是加密和匿名的,因此没有其他人,包含苹果官方都无法查看其位置。

 
警告

- 1.请勿自行拆开或改装本产品;
- 2.请勿将本产品存放在潮湿环境中;
- 3.请勿将产品靠近热源或于热源附近充电;
- 4.请勿将水或其它液体流入本产品介面内部,导致本产品损坏;
- 5.避免阳光直接照射;
- 6.使用或充电期间避免长时间运行高耗电的程式;
- 7.请于通风良好的地方使用;
- 8.如出现过热,请停止使用。

如何处理废弃电子产品

- 1.请勿将电子产品当成家庭废弃物丢弃;

INSTRUCTION MANUAL

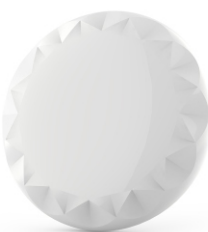

SiNE TAG

Find my Bluetooth Finder (Y1)

Packing List

- Find my Bluetooth Finder *1
- CR 2030Battery *1
- Instruction Manual *1

Main Functions

1、Locate your item

If your missing item isn't nearby, the Find My App can still help you track it down using the Find My network—hundreds of millions of iPhone, iPad, and Mac devices around the world. Nearby devices securely send the location of your missing device to iCloud, then you can see where it is in the **Find My** App. It's all anonymous and encrypted to protect everyone's privacy.

2、Lost mode

When the device is disconnected with your iPhone (or others of paired Apple equipment) for more than a period of time and it cannot be connected through the **Find My** App, you can also select Lost Mode and tap Enable tab. Then enter and leave your message, contact number, etc. The person who finds it can get this information through the Finder App and contact you. Besides, when you are within the BLE connection region of the device, you will also be notified that the lost device is nearby. Then you can search for the device by function of Play Sound.

3、Play Sound

· Open the Find My App, tap the Items tab, then tap your item.
· Click Play Sound, when the item under the BLE connection region (generally straight forward about 20 meters) it will emit beep sound so you can find the item easily.

Quick instructions

1、Turn on the device

· Insert the battery then the device will beep and turn on.

2、Pair the device

· Open the Find My App.
· Hold the device close to your iPhone, tap the Items tab, tap+ then Add Other Item.
· Select the device mark with SiNE TAG then tap Connect.
· Type a name for your device, select an Emoji symbol.
· Tap Agree to acknowledge that this item will be linked to your Apple ID.
· Tap Finish.

3、Enable Lost Mode

When the device is disconnected with your iPhone (or others of paired Apple equipment) for more than a period of time and it cannot be connected through the **Find My** App, you can also select Lost Mode and tap Enable tab. Then enter and leave your message, contact number, etc. The person who finds it can get this information through the Finder App and contact you. Besides, when you are within the BLE connection region of the device, you will also be notified that the lost device is nearby. Then you can search for the device by function of Play Sound.

4、Remove the device

· Open the Find My App, tap the Items tab, then tap your item.
· Tap Remove Item and then tap Remove to complete the operation.
Note: After deleting the device, the device will emit beep sound. The device will not shut down, and it is in pairing mode. If there is no re-pairing within 10 minutes, the device will leave the pairing state, and the device and the App cannot be paired at this time. If you need to pair the device, you need to re-insert the battery. After the device emit one beep sound and enters the pairing state, it can be re-paired with the App.

Instructions for other functions

1、Power off

· When removing the battery of device, the device will be powered off.

2、Device status confirmation

Make the bottom side of device upward and stay for 5 seconds then turn over the device make its top side upward and stay for 5 seconds. The device will emit beep, indicating that the device is working. If the device does not beep, it means the device is powered off and please confirm whether its battery voltage is sufficient to normal power supply.

3、The device enters the pairing state again

After deleting the device, the device will beep and not shut down for getting into pairing mode. If there is no re-pairing within 5 minutes, the device will leave the pairing state, and the device and the App cannot be paired at this time. If you need to pair the device, you need to re-install the battery of device then the device will beep. At this point, the device enters the pairing state and can be re-paired with the Find My App.

4、Factory Reset

Re-insert the battery 5 times in 30 seconds. Each time of re-insert the battery will emit one beep sound for indicating. After finish 5 times of battery re-insert, the device will emit a long and different beep sounds to indicate the factory reset is complete. After above, the device can now be paired under factory reset.

Note:

For new owner using, it's must that removing items from last owner. Factory reset will keep some information to prevent original owner lost device.

Instructions for device button

Note:

Due to the potential risk of product damage during the disassembly process of the casing, the button functionality is reserved for use by maintenance personnel only, to assess whether the motion sensor is operating abnormally.

1、Device status confirmation

Double-click the device button twice, the device will emit beep sound indicating that the device is working. If the device does not beep, it means the device is powered off. Please confirm whether the battery is sufficient to normal power supply. After re-set up the battery, please make sure that the device emits beep sound.

2、The device enters the pairing state again

After deleting the device, the device will beep, the device will not shut down, and it is in pairing mode. If there is no re-pairing within 10 minutes, the device will leave the pairing state, and the device and the App cannot be paired at this time. If you need to pair the device, you need to click the device button once, and the device will beep. At this point, the device enters the pairing state and can be re-paired with the App.

FAQ

1. When can the device be located?

When an item is separated from its owner for a period, it can be found by other Apple devices that are part of the Find My network and the owner can start to get the location of the device.

2. How to confirm whether the device has been turned on?

First, please turn the device back up for five seconds and then face up for five seconds. If the device beeps, it means the device is working. If the device does not emit beep sound, it means the device is turned off. Please reinstall the battery to power on the device.

3. How is the device designed to discourage unwanted tracking?

If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways:

(1) If you have an iPhone, iPad, or iPod touch, Find My will send a notification to your Apple device. This feature is available on iOS or iPad OS 14.5 or later.

 
(2) If you don't have an iOS device or a smart phone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved. These features were created specially to discourage people from trying to track you without your knowledge.

4. How is my privacy protected?

Only you can see where your item is. Your location data and history are never stored on the item itself. Devices that relay the location of your item also stay anonymous, and that location data is encrypted every step of the way. So not even Apple knows the location of your device or the identity of the device that helps find it.

5. How to replace the battery:

- (1) Rotate the battery cover counter-clockwise to unlock and take off the upper cover of the battery compartment.
- (2) Remove the battery from battery compartment.
- (3) Install the new battery into the compartment as shown below, and making sure the positive pole upward. After hearing the power-up beep, rotate the battery cover clockwise to lock and fasten it.

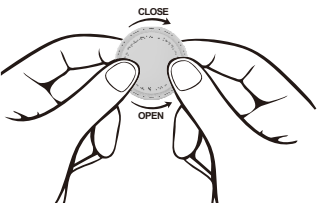

6. What is the Find My network? And how does it work?

The Apple Find My network provides an easy, secure way to locate compatible personal items on a map using the Find My App on your iPhone, iPad, iPod touch, Mac, or the Find Items App on Apple Watch. Simply pair your compatible product with the Apple Find My App to view it right alongside your Apple devices. If your item ever goes missing, you can put it in Lost Mode to display a message and contact information to anyone who might find it. The Find My network is encrypted and anonymous, so no one else, not even Apple, can view its location.

WARNING

1. Do not dismantle or modify the product;
2. Do not store the product in wet conditions;
3. Do not keep or use the product near heat sources;
4. Do not let water or any other liquid flows into the inside part of the product's interface. This would cause damages to the product;
5. Avoid direct sunlight. Keep away from heat source;
6. Avoid high processor load in long running loops;
7. Ensure good ventilation while using, while charging;
8. In case of overheating, stop using the product.

Disposal Of Electronic Products

1. Do not place the product as household waste;
2. Please dispose of discarded electronic products properly according to local regulations.
3. Yooborn encourages you to participate in electronics recycling program.

Warranty Conditions

1. For any defect, in the judgment of our technician, caused under normal

2. Please follow the local regulations for handling discarded electronic products;
3. Yooborn encourages you to actively participate in electronic product recycling plans.

保养条款

- 1.由购买日期起12个月内,如产品有损坏或故障,经本公司技术人员证实为在正常使用之情况下发生,本公司将提供免费维修服务;
- 2.维修时必须出示本保用证及购买商号之发票正本,如果用户不能提供,本公司有权不提供维修服务。用户可能需要支付相关维修费用;
- 3.保用期内,出现以下条款产品保用证自动失效:

- (a)非本公司人员意拆解或维修产品之任何部分;
 - (b)错误的操作如:非法接驳电源,以及水、污秽物渗入产品内导致产品损坏;
 - (c)不可抗拒意外事件或天然灾害导致产品损坏;
- 4.此保用证如经济涂改,保用证自动失效;
 - 5.本公司有权地删任何维修及保用条款而不作通知;
 - 6.如因错误使用本公司产品而导致手提电话或其他电子产品有任何损坏,本公司不会承担任何责任;
 - 7.有关Yooborn原装产品和您的手机或电子产品的相容性,请在购买时向经销商确认。此产品规格随时可能变更,恕不另行通告。